


 

 


 

 

 

 

 

 

 

 

 

 

















 



 



 
 
 

 

 
 


 

 

 




Originalfernbedienung    Ersatzfernbedienung

|                                                                                     |            |                                                                                     |       |
|-------------------------------------------------------------------------------------|------------|-------------------------------------------------------------------------------------|-------|
|    | Power      |    | Power |
|    | Mute       |    | Mute  |
|    | TV         |    | Smart |
|    | Text / Mix |    | Text  |
|    | 1          |    | 1     |
|    | 2          |    | 2     |
|    | 3          |    | 3     |
|    | 4          |    | 4     |
|    | 5          |    | 5     |
|   | 6          |   | 6     |
|  | 7          |  | 7     |
|  | 8          |  | 8     |
|  | 9          |  | 9     |
|  | 0          |  | 0     |
|  | Up / P +   |  | Up    |
|  | Up / P +   |  | Ch +  |
|  | Down / P - |  | Down  |

Originalfernbedienung    Ersatzfernbedienung

|                                                                                       |                 |                                                                                       |         |
|---------------------------------------------------------------------------------------|-----------------|---------------------------------------------------------------------------------------|---------|
|    | Down / P -      |    | Ch -    |
|    | Right / Vol +   |    | Right   |
|    | Right / Vol +   |    | Vol +   |
|    | Left / Vol -    |    | Left    |
|    | Left / Vol -    |    | Vol -   |
|    | Red             |    | Red     |
|    | Green / Picture |    | Green   |
|    | Yellow / Tuning |    | Yellow  |
|    | Blue / Features |    | Blue    |
|   | Expand          |   | 3D      |
|  | Reveal          |  | Media   |
|  | Norm / Hold     |  | Pause   |
|  | Recall / Index  |  | Info    |
|  | Recall / Index  |  | Pre Ch  |
|  | Subpage         |  | Subt    |
|  | Update          |  | Options |
|  | I / II          |  | Dual    |



