



 



 

 

 
 


 





 
 






Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|--------|
|  | Power |  | Power |
|  | Mute |  | Mute |
|  | Red / Reset |  | Red |
|  | Green / TXT |  | Green |
|  | Green / TXT |  | Text |
|  | Yellow |  | Yellow |
|  | Blue / Panel |  | Blue |
|  | << |  | << |
|  | >> |  | >> |
|  | I<< |  | I<< |
|  | >>I |  | >>I |
|  | Play |  | Play |
|  | Pause |  | Pause |
|  | Stop |  | Stop |
|  | Rec |  | Rec |
|  | FAV |  | Pre Ch |
|  | Freeze |  | Smart |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|-------|
|  | Sleep |  | Sleep |
|  | TV/R |  | TV/R |
|  | Menu |  | Menu |
|  | Exit |  | Exit |
|  | Up / CH+ |  | Up |
|  | Left / Vol- |  | Left |
|  | OK |  | Ok |
|  | Right / Vol+ |  | Right |
|  | Down / CH- |  | Down |
|  | SAT |  | Media |
|  | Back |  | Back |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | CH+ |  | Ch + |
|  | CH- |  | Ch - |
|  | INF |  | Info |
|  | EPG |  | Guide |



