 




 

 



 
 




 
 
 

 
 







 









 



 

 
 







 
 
 


 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Vol+		Vol +
	Vol-		Vol -
	PR+		Ch +
	PR-		Ch -
	Exit		Exit
	Back		Back
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Info		Info

Originalfernbedienung Ersatzfernbedienung

	Menu		Menu
	Mute		Mute
	Source		AV
	Swap		Pre Ch
	0		0
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	EPG		Guide
	Text		Text
	FAV		Shift + Pre Ch





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Sleep		Sleep				
	Subtitle		Subt				
	Lang		Dual				
	Screen		Format				
	Presets		Eject				
	Internet		Smart				
	Multimedia		Media				
	Play		Play				
	My Button1		List				
	My Button2		D. Menu				
	Rec		Rec				
	Pause		Pause				
	Stop		Stop				
	>>		>>				
	<<		<<				
	>>I		>>I				
	I<<		I<<				

