



**Originalfernbedienung    Ersatzfernbedienung**

	Mute		Mute / Dimmer
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	APP		Shift + Green / APP /
	APP		Display / Media
	0		0
	Back		Back / Return
	L-		I<< / Preset-
	L+		>>I / Preset+

**Originalfernbedienung    Ersatzfernbedienung**

	Menu		Menu / Home
	Up		Up
	Exit		Exit / Cancel / Clear
	Left		Left
	OK		OK
	Right		Right
	CH+		CH+ / Page+
	Down		Down
	Vol+		Vol+
	CH-		CH- / Page-
	Vol-		Vol-
	Info		Info / Angle
	List		Smart / List
	EPG		Guide / EPG / -/-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat





Originalfernbedienung Ersatzfernbedienung

	Blue		Blue / Prime Video / Random
	Audio		Audio / Lang I/II
	Subt		Subtitle / EQ
	Text		Text / Goto
	Tv/Rad.		TV/Radio /
	OPT		Setup / OPT /
	Still		Pause / Step / Freeze
	Tv/AV		AV / Input / RDS

Originalfernbedienung Ersatzfernbedienung


