
 





 

 
 


 
 

 




 
 




 
 
 
 
 
 




Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
On/Off		Power	
Mute		Mute	
Update		Smart	
Reveal		Format	
Txt Stop		Stop	
Subt.List		Subt	
Sleep Timer		Sleep	
Return TV		TV/R	
Info		Info	
Menu video		D. Menu	
Text		Text	
Txt Expand		Eject	
TV/AV		AV	
Menu		Menu	
Display	 +  Shift + Info		
Menu Up		Up	
Menu Down		Down	
Menu Right		Right	
Menu Left		Left	
OK Enter		Ok	
Menu Off		Exit	
Back		Back	
Volume+		Vol +	
Volume-		Vol -	
Chan.Up		Ch +	
Chan.Down		Ch -	
Menu audio		Dual	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
8		8	
9		9	
0/10		0	
Guide -/-- 1.		Guide	
2.Fav P/C 2.		Pre Ch	
Red		Red	
Tone-		I<<	
Tone+		>>I	
Audio-		<<	
Color- S.Std		List	
Audio+		>>	
Green		Green	
Yellow		Yellow	
Blue		Blue	
On/Tim	 + 	Shift + Subt	
Game Coo	 + 	Shift + Eject	
Browse	 + 	Shift + Back	
Contrast+	 + 	Shift + Ch +	
Contrast-	 + 	Shift + Ch -	
Swap		Media	
Surround	 + 	Shift + Red	
On Pip		3D	
Nicam/Mono	 + 	Shift + Green	
Level L	 + 	Shift + Yellow	
Level R/Woofer	 + 	Shift + Blue	

