






 






 


















 
 







 






Originalfernbedienung Ersatzfernbedienung


 

 



 







	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Red/M		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Up		Up
	Down		Down

Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Left		Left
	OK		Ok
	PR+		Ch +
	PR-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Menu		Menu
	TV		TV/R
	Video		AV
	L/?		Guide
	L/?		Dual
	PC		Pre Ch
	Text		Text
	F[+]		3D
	Hold/Freeze		Format
	M/S		Options





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Mute		Mute				
	PIP		Media				
	Auto/Page		Smart				
	i		Info				
	Timer/Mix		Subt				
	F1		Shift + 1				
	F2		Shift + 2				
	F3		Shift + 3				
	F4		Shift + 4				

