 








 
 

 
 
 

 



 


 



 
 

 

 





Originalfernbedienung Ersatzfernbedienung

 

 

 

 

 

 

 

 
 
 
 



 
 

 

 

 

	Power		Power
	Audio I/II		Dual
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Sleep		Sleep
	Recall		Back
	Exit		Exit
	Menu		Menu

Originalfernbedienung Ersatzfernbedienung

	Source		AV
	Info		Info
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	Vol +		Vol +
	Vol -		Vol -
	CH +		Ch +
	CH -		Ch -
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	P.Mode		Format
	S.Mode		Shift + Dual





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	P.Size		Eject				
	Subtitle		Subt				
	Play/Pause / TS		Play				
	Play/Pause / TS		Pause				
	Stop		Stop				
	Rec		Rec				
	Text		Text				
	<< / PVR List		<<				
	<< / PVR List		List				
	>> / DTV/Radio		>>				
	>> / DTV/Radio		TV/R				
	I<< / Fav.CH		I<<				
	I<< / Fav.CH		Pre Ch				
	>>I / Guide		>>I				
	>>I / Guide		Guide				

