 






 
 








 



 






 
 


 




















 
 



 


 


 

 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	PP		Back
	P<P		Pre Ch
	--		Guide
	Info		Info
	I-II		Dual

Originalfernbedienung Ersatzfernbedienung

	Up		Up
	P+		Ch +
	Down		Down
	P-		Ch -
	Right		Right
	Left		Left
	M		Ok
	Vol+		Vol +
	Vol-		Vol -
	Red/Sound		Red
	Green/Picture		Green
	Yellow/Feature		Yellow
	Blue/Install		Blue
	TV		TV/R
	AV		AV
	[≡]		Text
	[ /≡]		3D





Originalfernbedienung    Ersatzfernbedienung

	[≡o]		Media
	[≡+]		Subt
	[≡x]		Exit
	[≡◆]		Format
	[≡?]		Options
	[≡i]		Menu

Originalfernbedienung    Ersatzfernbedienung