


Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------------|---|--------|
|  | Standby |  | Power |
|  | --- |  | Media |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | Text |  | Text |
|  | Red / SUB-T |  | Red |
|  | Red / SUB-T |  | Subt |
|  | Green / Sort |  | Green |
|  | Yellow / Timer |  | Yellow |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------------|---|------------|
|  | Yellow / Timer |  | Shift + AV |
|  | Blue / Info |  | Blue |
|  | Blue / Info |  | Info |
|  | Menu |  | Menu |
|  | Exit |  | Exit |
|  | Up |  | Up |
|  | Left / << |  | Left |
|  | OK |  | Ok |
|  | Right / >> |  | Right |
|  | Down |  | Down |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | Pause |  | Pause |
|  | Guide |  | Guide |
|  | Mute |  | Mute |
|  | CH+ |  | Ch + |
|  | CH- |  | Ch - |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|---------------|--|--------|
| | TV / STB | | AV |
| | TV / Radio | | TV/R |
| | ((•••)) A.L/R | | Smart |
| | A.Lang | | Dual |
| | Sleep | | Sleep |
| | Recall | | Back |
| | FAV | | Pre Ch |
| | P.STD | | Format |
| | P.Size | | List |
| | Zoom | | Eject |
| | M-PIG | | 3D |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

