 





 







 











 



 








 


 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Internet		Smart / List
	Source		AV / Input / RDS
	Lang		Audio / Lang I/II
	Tv/Radio		TV/Radio /
	Subtitle		Subtitle / EQ
	LIB		Picture / Format
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	<<		<< / Tune-
	Play		Play / Slow
	Pause		Pause / Step / Freeze



 





 


 

 





Originalfernbedienung Ersatzfernbedienung

	>>		>> / Tune+
	Menu		Menu / Home
	Up		Up
	Back		Back / Return
	Left		Left
	OK		OK
	Right		Right
	i		Info / Angle
	Down		Down
	Exit		Exit / Cancel / Clear
	Vol+		Vol+
	P:::P		Display / Media
	PR+		CH+ / Page+
	Vol-		Vol-
	FAV		Fav / Marker / PC
	PR-		CH- / Page-
	1		1





Originalfernbedienung Ersatzfernbedienung

	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Text		Text / Goto
	0		0
	Guide		Guide / EPG / -/--

Originalfernbedienung Ersatzfernbedienung

