







 
 
 

 



 

 



 



 






 




Originalfernbedienung Ersatzfernbedienung

	TV		TV/R
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	SAT TNT		Smart
	HD		Media
	V +		Vol +
	V -		Vol -
	Chaines Preferees		Pre Ch


Originalfernbedienung Ersatzfernbedienung

	Silence		Mute
	P +		Ch +
	P -		Ch -
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Pilote		Options
	Menu		Menu
	Guide		Guide
	Retour		Back
	Serv		Text
	Sortie		Exit
	<<		<<
	Play		Play
	>>		>>





Originalfernbedienung Ersatzfernbedienung

	Stop / Input		Stop
	Stop / Input		AV
	Rec		Rec
	Pause / -/--		Pause
	Pause / -/--	 + 	Shift + Guide

Originalfernbedienung Ersatzfernbedienung

