
 

 

 



 



 

 

 



 
 

 









Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Return		Back
	Vol +		Vol +
	Vol -		Vol -
	Source		AV
	CH +		Ch +

Originalfernbedienung Ersatzfernbedienung

	CH -		Ch -
	Menu		Menu
	P.Mode		Format
	Up		Up
	Left		Left
	Sleep		Sleep
	OK		Ok
	Right		Right
	Down		Down
	Exit		Exit
	Guide		Guide
	Info		Info

