



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TDT / A		Smart
	16:9 / B		Format
	SAT / C		Media
	AUX / D		AV
	INF / E		Info
	Sleep / F		Sleep
	TV/RA		TV/R
	EPG		Guide
	Red / Text		Red
	Red / Text		Text
	Green / Back		Green
	Green / Back		Back
	Yellow / Subtitle		Yellow
	Yellow / Subtitle		Subt
	Blue / Audio		Blue
	L/R		List

Originalfernbedienung Ersatzfernbedienung

	Blue / Audio		Dual
	Up		Up
	Left / Vol-		Left
	Left / Vol-		Vol -
	OK		Ok
	Right / Vol+		Right
	Right / Vol+		Vol +
	Down		Down
	Exit		Exit
	Menu		Menu
	<<		<<
	<<		Ch -
	>>		>>
	>>		Ch +
	1		1
	2		2
	3		3





Originalfernbedienung Ersatzfernbedienung

<b>4</b>	4	<b>4</b>	4
<b>5</b>	5	<b>5</b>	5
<b>6</b>	6	<b>6</b>	6
<b>7</b>	7	<b>7</b>	7
<b>8</b>	8	<b>8</b>	8
<b>9</b>	9	<b>9</b>	9
<b>0</b>	0	<b>0</b>	0
<b>II</b>	Pause	<b>II</b>	Pause
<b>MUTE</b>	Mute	<b>MUTE</b>	Mute
<b>F1</b>	F1	<b>SHIFT</b> + <b>1</b>	Shift + 1
<b>F2</b>	F2	<b>SHIFT</b> + <b>2</b>	Shift + 2
<b>F3</b>	F3	<b>SHIFT</b> + <b>3</b>	Shift + 3
<b>F4</b>	F4	<b>SHIFT</b> + <b>4</b>	Shift + 4
<b>F5</b>	F5	<b>SHIFT</b> + <b>5</b>	Shift + 5

Originalfernbedienung Ersatzfernbedienung


