




 


 





 


 



 

 











 

 







 





 










Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TV		TV/R
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Retoru		Back
	Sortie		Exit
	Menu		Menu
	V+		Vol +
	V-		Vol -
	Zoom		Eject
	Mute		Mute
	P+		Ch +
	P-		Ch -
	0		0

Originalfernbedienung Ersatzfernbedienung

	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	<<		<<
	>		Play
	>>		>>
	Stop		Stop
	Rec		Rec

