







 
 
 





 

 
 




 

 





 




Originalfernbedienung Ersatzfernbedienung


 










 

 
 
 


 



 
 
 





 
 

	Power		Power
	HDMI Control		D. Menu
	Record		Rec
	Play		Play
	Pause		Pause
	Stop		Stop
	I<<		I<<
	<<		<<
	>>		>>
	>>I		>>I
	Screen		Format
	Lang		Dual
	Subtitle		Subt
	Internet		Media
	Red/Zoom/↑		Red
	Green/Repeat/↓		Green
	Yellow / Root		Yellow

Originalfernbedienung Ersatzfernbedienung

	Blue / Title		Blue
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Text		Text
	Swap		Pre Ch
	Up		Up
	Down		Down
	Right		Right
	Left		Left





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 OK	Ok	 OK	Ok
 P/CH +	P/Ch+	 CH +	Ch +
 P/CH -	P/Ch-	 CH -	Ch -
 Vol+	Vol+	 VOL +	Vol +
 Vol-	Vol-	 VOL -	Vol -
 Mute	Mute	 MUTE	Mute
 MENU	Menu	 TOP MENU	Menu
 SOURCE	Source	 TIMER AV	AV
 RETURN	Return	 RETURN BACK	Back
 EPG	Epg	 GUIDE	Guide
 INFO	Info	 DISPLAY INFO	Info
 SLEEP	Sleep	 PROG SLEEP	Sleep
 3D	3D	 ECO 3D	3D
 SEARCH MODE	Search Mode	 SEARCH TV/R	TV/R
 Music/Movie/Phot	Music/Movie/Phot	 HOME SMART	Smart
 DISPLAY	Display	 SHIFT + DISPLAY INFO	Shift + Info
 PRESETS	Presets	 SETTINGS OPT	Options

