



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Text / Play/Pause		Play / Slow
	Text / Play/Pause		Pause / Step / Freeze
	Text / Play/Pause		Text / Goto
	Still / Stop		Stop / Hold
	Radio		TV/Radio /
	Aspect / Size		Zoom / Size
	Red / <<		<< / Tune-
	Red / <<		Red / Netflix / Search
	Green / >>		Green / APP / Repeat
	Green / >>		>> / Tune+
	Yellow / I<<		Yellow / YouTube / Repeat
	Yellow / I<<		I<< / Preset-
	Blue / >>I		>>I / Preset+
	Blue / >>I		Blue / Prime Video / Random
	Source		AV / Input / RDS

Originalfernbedienung Ersatzfernbedienung

	Menu		Menu / Home
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Info		Info / Angle
	Exit		Exit / Cancel / Clear
	Vol +		Vol+
	Index		Display / Media
	CH +		CH+ / Page+
	Vol -		Vol-
	List		Smart / List
	CH -		CH- / Page-
	1		1
	2		2
	3		3



