

































































 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	TV / Rad		TV/Radio /
	0		0
	TV / Sat		Display / Media
	EPG		Guide / EPG / -/--
	Info		Info / Angle
	Menu		Menu / Home

Originalfernbedienung Ersatzfernbedienung

	Up / CH+		Up
	Up / CH+		CH+ / Page+
	Exit		Exit / Cancel / Clear
	Left / Vol-		Left
	Left / Vol-		Vol-
	OK		OK
	Right / Vol+		Right
	Right / Vol+		Vol+
	Down / CH-		Down
	Down / CH-		CH- / Page-
	Group		Smart / List
	Page+		Shift + CH+ /
	Page+		>> / Preset+
	Pause		Pause / Step / Freeze
	Color		Picture / Format
	Page-		Shift + CH- /
	Page-		<< / Preset-





Originalfernbedienung Ersatzfernbedienung

	UHF		AV / Input / RDS
	Red / Recall		Red / Netflix / Search
	Red / Recall		Back / Return
	Green / Audio		Green / APP / Repeat
	Green / Audio		Audio / Lang I/II
	Yellow / Text		Yellow / YouTube / Repeat
	Yellow / Text		Text / Goto
	Blue		Blue / Prime Video / Random
	RGB / YPbPr		Setup / OPT /
	Subtitle		Subtitle / EQ
	Wide		Zoom / Size

Originalfernbedienung Ersatzfernbedienung

