 



 

 

 



 

 
 
 




 
















Originalfernbedienung Ersatzfernbedienung

	★		Fav / Marker / PC
	POWER		Power
	MUTE		Mute / Dimmer
	GREEN / F2		Green / APP / Repeat
	YELLOW / F3		Yellow / YouTube / Repeat
	BLUE / F4		Blue / Prime Video / Random
	RED / F1		Red / Netflix / Search
	Rec		Rec / Rec Mode
	APP		Shift + Green / APP /
	Sound Mode		Sound / Title
	SETUP		Setup / OPT /
	TV		Shift + 1
	≡		Smart / List
	KB		Display / Media
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	<<		<< / Tune-











 












Originalfernbedienung Ersatzfernbedienung

	>>		>> / Tune+
	Home		Menu / Home
	BACK		Back / Return
	UP		Up
	LEFT		Left
	OK		OK
	RIGHT		Right
	DOWN		Down
	i		Info / Angle
	VOL+		Vol+
	: ≡		D.Menu / Top
	PLAY/PAUSE		Play / Slow
	VOL-		Vol-
	PLAY/PAUSE		Pause / Step / Freeze
	CHAN.+		CH+ / Page+
	STOP		Stop / Hold
	1		1





Originalfernbedienung Ersatzfernbedienung

	2		2
	CHAN.-		CH- / Page-
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Format		Picture / Format
	0		0
	Recall / Del		Exit / Cancel / Clear

Originalfernbedienung Ersatzfernbedienung

