





 



 

 




 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open / Close		Eject
	TV / DTV		TV/R
	Line		AV
	DVD		Media
	TTX		Text
	PIP ON / OFF		Shift + Power
	PIP Swap		Shift + Back
	PIP Source		Shift + AV
	PIP Sound		Shift + Dual
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7

Originalfernbedienung Ersatzfernbedienung

	8		8
	9		9
	-/--		Shift + Guide
	0		0
	PRE		Pre Ch
	Vol +		Vol +
	Vol -		Vol -
	Prog +		Ch +
	Prog -		Ch -
	M/S		Subt
	Still		Shift + Pause
	Sleep		Sleep
	TV Menu		Menu
	P.STD		Format
	S.STD		Shift + Subt
	P.Size		Shift + Format
	Exit / Cancel		Exit







**Originalfernbedienung    Ersatzfernbedienung**

	Up		Up
	Right		Right
	Down		Down
	Left		Left
	Enter		Ok
	Mute		Mute
	Display		Shift + Info
	Stop		Stop
	Play		Play
	Pause		Pause
	<<		<<
	>>		>>
	I<<		I<<
	>>I		>>I
	Red / Setup		Red
	Green / Title		Green
	Yellow / Menu		Yellow

**Originalfernbedienung    Ersatzfernbedienung**

	Blue		Blue
	Index Repeat		Shift + Text
	MIX A-B		Shift + TV/R
	L/F Audio		Dual
	Size Subtitle		3D
	Reveal Goto		Back
	Hold / Program / Menu		Shift + Menu
	Prepage / Angle / List		List
	Next Page / Surround / Opt		Options
	Subpage / Zoom / EPG		Guide
	Store / Clear / i		Shift + Exit
	Store / Clear / i		Info

