







 



 

 

 













 

 





 

 


 

















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TV / AV		AV / Input / RDS
	TV/TXT		Text / Goto
	Cancel		Shift + Exit / Cancel / Clear
	Reveal		Display / Media
	DTV		D.Menu / Top
	Hold		Stop / Hold
	Size		Shift + Zoom /
	Subpage		Eject / Surround
	Index		Smart / List
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	CH+		CH+ / Page+
	Menu		Menu / Home
	Vol+		Vol+

Originalfernbedienung Ersatzfernbedienung

	CH-		CH- / Page-
	Exit		Exit / Cancel / Clear
	Vol-		Vol-
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9



