 

 
 


 

 

 
 
 


 
 

 

 
 
 
 
 

 

 
 
 

 





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|--------|
|  | Power |  | Power |
|  | Open / Close |  | Eject |
|  | Mute |  | Mute |
|  | Mode |  | Media |
|  | Red |  | Red |
|  | Green |  | Green |
|  | Yellow |  | Yellow |
|  | Blue |  | Blue |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------------|---|---------------|
|  | 0 |  | 0 |
|  | Clear |  | Exit |
|  | Select / caps/num |  | Guide |
|  | V+ |  | Vol + |
|  | V- |  | Vol - |
|  | Search |  | TV/R |
|  | Zoom |  | Shift + Eject |
|  | Setup |  | Options |
|  | P+ |  | Ch + |
|  | P- |  | Ch - |
|  | Info |  | Info |
|  | Pop Up Menu |  | Menu |
|  | Up |  | Up |
|  | Left |  | Left |
|  | Enter |  | Ok |
|  | Right |  | Right |
|  | Down |  | Down |

 

 




Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------------|---|--------------|
|  | Return |  | Back |
|  | Top Menu |  +  | Shift + Menu |
|  | Top Menu |  | D. Menu |
|  | Play |  | Play |
|  | Pause |  | Pause |
|  | Prev |  | I<< |
|  | Next |  | >>I |
|  | Stop |  | Stop |
|  | Slow |  +  | Shift + Play |
|  | REW |  | << |
|  | FWD |  | >> |
|  | Subtitle |  | Subt |
|  | Angle / Rotate |  | Format |
|  | Audio |  | Dual |
|  | Repeat |  | Text |
|  | Shuffle / PIP |  | Sleep |
|  | URL / 2nd Audio |  | Smart |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------------|---|--------------|
|  | URL / 2nd Audio |  +  | Shift + Dual |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

