

 

 

 

 

 

 

 

 

 
 
 

 
 
 

 

 
 
 


 
 
 
 

 

 

 

 

 

 

 

 

 
 




 
 
 



 





Originalfernbedienung Ersatzfernbedienung

	On		Shift + Power
	Standby		Power
	Sleep		Sleep
	Dimmer		Smart
	Status		Options
	Search		TV/R
	BD		1
	Tuner		2
	Band		3
	DVD		4
	Dock		5
	Shift		6
	TV		7
	Game		8
	SAT/CBL		9
	V.AUX		0
	Memory		Subt

Originalfernbedienung Ersatzfernbedienung

	Mode		Format
	CH+		Ch +
	CH-		Ch -
	Tuning Up		Shift + Ch +
	Tuning Down		Shift + Ch -
	Quick Select 1		Shift + 1
	Quick Select 2		Shift + 2
	Quick Select 3		Shift + 3
	Quick Select 4		Shift + 4
	Menu		Menu
	Audio Adjust		Dual
	Vol+		Vol +
	Vol-		Vol -
	Up		Up
	Down		Down
	Right		Right
	Left		Left

 

 





Originalfernbedienung Ersatzfernbedienung

	Enter		Ok
	CH Level		Media
	Return		Back
	Night		3D
	Restorer		Exit
	Tone		List
	Mute		Mute
	Surround Left		Shift + Left
	Surround Right		Shift + Right
	Audio Delay -		Shift + Vol -
	Audio Delay +		Shift + Vol +
	I<< Ipod		I<<
	Stop Ipod		Stop
	Play/Pause Ipod		Play
	>>I Ipod		>>I
	<< Ipod		<<
	>> Ipod		>>

Originalfernbedienung Ersatzfernbedienung

	Repeat Ipod		Text
	Random Ipod		Info

