



**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Open/Close		Eject / Surround
	Subtitle		Subtitle / EQ
	Angle		Info / Angle
	Language		Audio / Lang I/II
	Setup		Setup / OPT /
	Menu		Menu / Home
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Play		Play / Slow
	Slow		Shift + Play /
	Pause/Step		Pause / Step / Freeze
	Stop		Stop / Hold
	I<<		I<< / Preset-
	>>I		>>I / Preset+

**Originalfernbedienung Ersatzfernbedienung**

	<<		<< / Tune-
	>>		>> / Tune+
	V-Mode		Picture / Format
	Repeat		Green / APP / Repeat
	Zoom		Zoom / Size

