


 



 
 


 

 

 



 



 

 













 














 


 

 

 

 



 




| Originalfernbedienung | Ersatzfernbedienung | Originalfernbedienung | Ersatzfernbedienung |
|---|---------------------|---|---------------------|
|  | Power |  | Power |
|  | Source |  | AV |
|  | Rec |  | Rec |
|  | Play |  | Play |
|  | Pause |  | Pause |
|  | Stop |  | Stop |
|  | Lang |  | Dual |
|  | << |  | << |
|  | >> |  | >> |
|  | Text |  | Text |
|  | Red |  | Red |
|  | Green |  | Green |
|  | Yellow |  | Yellow |
|  | Blue |  | Blue |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | Tv |  | TV/R |
|  | Back |  | Shift + Back |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Right |  | Right |
|  | Left |  | Left |
|  | OK |  | Ok |
|  | Menu |  | Menu |
|  | Exit |  | Exit |
|  | BACK |  | Back |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|-------------|--|---------|
| | Q.Menu | | D. Menu |
| | O | | Options |
| | Music/Photo | | Eject |
| | */o | | Subt |
| | */Search | | Sleep |
| | Tv List | | List |
| | i | | Info |
| | [≡] | | Guide |
| | Size | | Format |
| | Vol+ | | Vol + |
| | Vol- | | Vol - |
| | PR+ | | Ch + |
| | PR- | | Ch - |
| | Mute | | Mute |
| | | | |
| | | | |
| | | | |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

