 




 




 


 

 











Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	TV / Radio		TV/R
	FAV		Pre Ch
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Vol+		Vol +
	Vol-		Vol -
	Menu		Menu

Originalfernbedienung Ersatzfernbedienung

	EPG		Guide
	CH+		Ch +
	CH-		Ch -
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Info		Info
	Media		Media
	Back		Back
	Rec		Rec
	Stop		Stop
	Exit		Exit
	<<		I<<
	<<		<<
	Play/Pause		Pause





Originalfernbedienung Ersatzfernbedienung

	Play/Pause		Play
	>>		>>I
	>>		>>
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	TXT		Text
	SUB		Subt
	AUD		Dual
	HLP		3D

Originalfernbedienung Ersatzfernbedienung

