



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Audio		Dual
	TV / STB		Shift + TV/R
	TV / R		TV/R
	Sleep		Sleep
	SUB		Subt
	TXT		Text
	Multi		Smart
	P / N		Shift + 1
	Recall		Pre Ch
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6



 
 



 

Originalfernbedienung Ersatzfernbedienung

	7		7
	8		8
	9		9
	0		0
	PGUP		Vol +
	PGDN		Vol -
	SAT		Shift + AV
	FAV +		Ch +
	FAV -		Ch -
	EPG		Guide
	Fav		Shift + Pre Ch
	Up / CH+		Up
	Right / Vol+		Right
	Down / CH-		Down
	Left / Vol-		Left
	OK		Ok
	Menu		Menu








 

 

 
 







Originalfernbedienung Ersatzfernbedienung

	Exit		Exit
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Pause		Pause
	Zoom		Eject
	Edit		Format
	Info		Info
	USB		AV
	MP3		Media
	JPEG		Shift + Media
	PVR List		List
	PIP		Shift + Ok
	A - B		Back
	T.S.		Shift + 2
	Goto		Options

Originalfernbedienung Ersatzfernbedienung

	Stop		Stop
	Rec		Rec
	<<		<<
	>>		>>
	Play / Pause		Play
	> <		Shift + Pause
	I<<		I<<
	>>I		>>I

