
 

 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	[≡]		Text
	Sleep		Sleep
	Color		Options
	[ + ]/◆		Info
	?		Smart
	16:9/[+]		Format
	I-II/[≡i]		Dual
	(<>)/X		Exit
	Up		Up
	P+		Ch +
	P-		Ch -
	Down		Down
	Right		Right
	Vol+		Vol +
	Left		Left
	Vol-		Vol -

Originalfernbedienung Ersatzfernbedienung

	Menu		Menu
	Menu		Ok
	Inst		Media
	Source		AV
	P<P		Pre Ch
	Red/Picture		Red
	Picture		Shift + Format
	Green/Sound		Green
	Sound		Shift + Dual
	Yellow/Timer		Yellow
	Timer		Shift + AV
	Blue/Headphon		Blue
	Headphones		List
	1		1
	2		2
	3		3
	4		4





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
<b>5</b>	5	<b>5</b>	5
<b>6</b>	6	<b>6</b>	6
<b>7</b>	7	<b>7</b>	7
<b>8</b>	8	<b>8</b>	8
<b>9</b>	9	<b>9</b>	9
<b>0</b>	0	<b>0</b>	0
<b>PP</b>	PP	<b>ZOOM</b>	Eject
<b>⊘</b>	Mute	<b>MUTE</b>	Mute

