 





**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Select		Menu
	:≡		Smart
	Tv		TV/R
	Red/B		Red
	Green/A		Green
	Blue/X		Blue
	Yellow/Y		Yellow
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9

**Originalfernbedienung    Ersatzfernbedienung**

	0		0
	Recall		Pre Ch
	←		Guide
	Info/Guide		Info
	Message		Subt
	?/Options		Options
	[ ]/↔		Dual
	Vol+		Vol +
	Vol-		Vol -
	PR+		Ch +
	PR-		Ch -
	Up		Up
	Down		Down
	Right		Right
	Mute		Mute
	Left		Left
	OK		Ok





**Originalfernbedienung Ersatzfernbedienung**

	Free		Media
	Rec		Rec
	>>		>>
	Play/Pause		Play
	Stop		Stop
	<<		<<
	>>		>>
	<<		<<
	Start		AV
	Up(Games)		Shift + Up
	Down(Games)		Shift + Down
	Right(Games)		Shift + Right
	Left(Games)		Shift + Left

**Originalfernbedienung Ersatzfernbedienung**