 



 

 


 
 
 
 
 
 
 

 

 
 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Vol+		Vol +
	Vol-		Vol -
	PR+		Ch +
	PR-		Ch -
	Mute		Mute
	Menu		Menu
	Exit		Exit
	Back		Back
	OK		Ok
	Up		Up
	Down		Down
	Right/Zoom+		Right
	Left/Zoom-		Left
	Red/[o]		Red
	Green/Timer/List		Green
	Yellow		Yellow

Originalfernbedienung Ersatzfernbedienung

	Blue/[]		Blue
	Info		Info
	Text		Text
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/-/--		0
	AV		AV
	SP/LP		Media
	Play		Play
	>>		>>





Originalfernbedienung Ersatzfernbedienung


 

	<<		<<
	Stop		Stop
	Pause		Pause
	Rec		Rec
	Mark		3D
	0000		Guide

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	PR+		Ch +
	PR-		Ch -
	Exit		Exit
	Menu		Menu
	Back		Back
	Up		Up
	Down		Down
	Right/Zoom+		Right
	Left/Zoom-		Left
	OK		Ok
	Red/[o]		Red
	Green/Timer/List		Green
	Yellow		Yellow

Originalfernbedienung Ersatzfernbedienung

	Blue/[]		Blue
	Info		Info
	Text		Text
	Play		Play
	Stop		Stop
	Rec		Rec
	Pause		Pause
	>>		>>
	<<		<<
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8





 



 

 



 



 

 

 
 
 







 


 


Originalfernbedienung Ersatzfernbedienung **Originalfernbedienung Ersatzfernbedienung**

Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
9	9		
AV	AV		
SP/LP	Media		

 

 
 
 
 
 

 

 
 
 
 

 

 

 

 

 
 
 
 

 
 
 
 




Originalfernbedienung Ersatzfernbedienung


	Power		Power
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	PR+		Ch +
	PR-		Ch -
	Menu		Menu
	Exit		Exit
	Back		Back
	Up		Up
	Down		Down
	Right/Zoom+		Right
	Left/Zoom-		Left
	OK		Ok
	Red/[o]		Red
	Green/Timer/List		Green
	Yellow		Yellow

Originalfernbedienung Ersatzfernbedienung

	Blue/[]		Blue
	Info		Info
	Text		Text
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/-/--		0
	AV		AV
	SP/LP		Media
	Play		Play
	Stop		Stop





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	>>		>>
	<<		<<
	Rec		Rec
	Pause		Pause
	Mark		3D
	0000		Guide

