





















## Originalfernbedienung    Ersatzfernbedienung

On/Off		Power
Mute		Mute / Dimmer
Menu Up		Up
Menu Left		Left
Menu Right		Right
Menu Down		Down
Volume+		Vol+
Chan.Up		CH+ / Page+
Volume-		Vol-
Chan.Down		CH- / Page-

## Originalfernbedienung    Ersatzfernbedienung




Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Power ON/Off		Power	
Mute		Mute / Dimmer	
Tape 1 Stop		Stop / Hold	
Tape 2 Pre./eq		D.Menu / Top	
Input/Source		AV / Input / RDS	
CD/Theater		Menu / Home	
CD Play		Play / Slow	
CD F.FWD		>> / Tune+	
CD Pause		Pause / Step / Freeze	
CD Rewind		<< / Tune-	
Funct./Direct		Exit / Cancel / Clear	
Volume+		Vol+	
Next/Prog+		CH+ / Page+	
Volume-		Vol-	
Tape 1 Hall/Ats		Display / Media	
Prev./Prog-		CH- / Page-	
Program		TV/Radio /	
Tape 1 Rew		I<< / Preset-	
Tape 1 Play		OK	
Tape 1 F.FWD		>>I / Preset+	



Program