
 
 

 











 


 

 





 








Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
On/Off	 Power	Menu Off	 Exit
Mute	 Mute	Menu Down	 Down
Update	 Play	Volume+	 Vol +
Reveal	 Pause	Chan.Up	 Ch +
Txt Stop	 Stop	Volume-	 Vol -
Info	 Rec	Menu audio	 Dual
Subt.List	 Subt	Chan.Down	 Ch -
Sleep Timer	 Sleep	1	 1
Return TV	 TV/R	2	 2
Menu video	 D. Menu	3	 3
Txt Expand	 Eject	4	 4
TV/AV	 AV	5	 5
Menu	 Menu	6	 6
Menu Up	 Up	7	 7
Menu Left	 Left	8	 8
OK Enter	 Ok	9	 9
Menu Right	 Right	Guide -/-- 1.	 Guide



Power (Red), MUTE, SHIFT (Orange)
 TV, DVD, SAT, AUX
 PLAY MODE: Play, Pause, Stop, Eject
 REC MODE: Record (Red Dot)
 DISC NAV: Previous, Previous 2, Next 2, Next
 SOUND: LIST, DUAL, AD, SETTINGS
 SUBT: SUBT, OPT
 PROG: SEARCH, PICTURE, ECO
 SLEEP: SLEEP, TV/R, FORMAT, 3D
 E-MANUAL: E-MANUAL, REPEAT, ZOOM, TIMER
 D.MENU: D.MENU, TEXT, AV
 TOP MENU: MENU, DISPLAY: INFO
 OK (Center of D-Pad)
 CLEAR: EXIT, RETURN: BACK
 HOME, SMART, APP, MEDIA
 + VOL, - VOL, + CH, - CH
 Numeric Keypad (1-9, 0, *, #)
 GUIDE, PRE-CH, FAV
 A (Red), B (Green), C (Orange), D (Blue)
Mandis shop
 www.mandis.tv