
 
 

 
 
 

 
 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Display	 + 	Shift + Info
	Nicam/A2		List
	Mute		Mute
	PMode	 + 	Shift + Format
	SMode	 + 	Shift + Dual
	Sleep		Sleep
	Aspect		3D
	LCD-Menu		Menu
	DVB-Menu		D. Menu
	Source		AV
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok




 
 
 

 

 

Originalfernbedienung Ersatzfernbedienung

	Ch+		Ch +
	Ch-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Text		Text
	Hold		Media
	Red		Red





Originalfernbedienung Ersatzfernbedienung

	Green		Green
	Yellow		Yellow
	Cyan		Blue
	Index		Smart
	Size		Format
	Reveal		Options
	Subpage		Eject
	Tv/Radio		TV/R
	Lang		Dual
	Page-		I<<
	Page+		>>I
	Subtitle		Subt
	Epg		Guide
	Fav		Pre Ch
	Info		Info

Originalfernbedienung Ersatzfernbedienung

