 



 

 





 
 
 
 


 


 


 

 







 

 




 

 




 
 
 

 
 



 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TV Set Power		Shift + Power
	TV Set V +		Vol +
	TV Set V -		Vol -
	Mute		Mute
	TV Mode		Options
	TV / Rad		TV/R
	Find		Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9

Originalfernbedienung Ersatzfernbedienung

	0		0
	Recall		Back
	Audio		Dual
	Menu		Menu
	Exit		Exit
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	Sat		AV
	Fav		Pre Ch
	PG +		Ch +
	PG -		Ch -
	YouTube		Smart
	Play / PauInfo		Info
	EPG		Guide





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 Play / Pause	 Play		
 Play / Pause	 Pause		
 << FB	 <<		
 >> FF	 >>		
 Stop	 Stop		
 I<< Prev	 I<<		
 >>I Next	 >>I		
 Sleep	 Sleep		
 Sub-T	 Subt		
 Text	 Text		
 Rec	 Rec		
 Red / IPTV	 Red		
 Green / Video	 Green		
 Yellow / PVR	 Yellow		
 Blue / Timer	 Blue		

