



**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	AV / TV		TV/R
	Menu		Menu
	TXT		Text
	PR +		Ch +

**Originalfernbedienung    Ersatzfernbedienung**

	PR +		Up
	PR -		Ch -
	PR -		Down
	Vol +		Vol +
	Vol +		Right
	Vol -		Vol -
	Vol -		Left
	OK		Ok
	SWAP		Back
	16:9		Format
	White / i		Info
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Stop		Stop
	Reveal		Smart





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
DOUBLE	Double	APP MEDIA	Media
SUB	SUB	AD SUBT	Subt
MIX	MIX	SHIFT + REPEAT TEXT	Shift + Text
	Update	ZOOM	Eject

