 







 

 

 

 

 

 

 

 

 

 
















 




 







 







 







Originalfernbedienung Ersatzfernbedienung

	Open / Close		Eject / Surround
	Mute		Mute / Dimmer
	NP		D.Menu / Top
	Recall		Back / Return
	PS		Text / Goto
	Spectrum		Smart / List
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10		Guide / EPG / -/--

Originalfernbedienung Ersatzfernbedienung

	Clear		Exit / Cancel / Clear
	Stop		Stop / Hold
	Zoom		Zoom / Size
	3D		Picture / Format
	Search		Red / Netflix / Search
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Setup		Setup / OPT /
	L/R Audio		Audio / Lang I/II
	Left		Left
	Up		Up
	Right		Right
	Enter		OK
	Down		Down
	PBC Menu		Menu / Home
	Vol-		Vol-
	Vol+		Vol+





Originalfernbedienung Ersatzfernbedienung

	OSD		Display / Media
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	Title		Sound / Title
	Slow		Shift + Play /
	Repeat		Green / APP / Repeat
	A-B		Yellow / YouTube / Repeat
	Return		Shift + Back / Return
	Subtitle		Subtitle / EQ
	Angle		Info / Angle
	Prog		TV/Radio /

Originalfernbedienung Ersatzfernbedienung

