







 












 

 
 













Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	List		List
	Recall		Back
	Vol+		Vol +
	Vol-		Vol -
	Aspect		3D

Originalfernbedienung Ersatzfernbedienung

	Home		Smart
	CH+		Ch +
	CH-		Ch -
	Menu		Menu
	Source		AV
	Exit		Exit
	Display		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	P.Mode		Shift + Format
	S.Mode		Dual
	Sleep		Sleep
	MTS		Options
	Rec		Rec





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
GUIDE	Guide	-/--	Guide
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	<</Index		<<
	Play		Play
	Pause/Cancel		Pause
	>>		>>
	I<</Sub.PG		I<<
	>>I/Reveal		>>I
	Stop/Mix		Stop
	TTX		Text
	CAP		Media
	Subtitle		Subt
	Tv/Radio		TV/R
	FAV		Pre Ch
	Size/Mouse		Format
	Hold/Refresh		D. Menu

