






 


 
















 

 

 








 

 



 


 





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Power		Power
	AUX		1
	AUX		Red
	TUNER / BAND		2
	TUNER / BAND	 + 	Shift + TV/R
	TUNER / BAND		Green
	DVD / CD		3
	DVD / CD		Blue
	TV		Yellow
	TV		4
	TV		TV/R
	VCR		5
	Volume+		Vol +
	Volume-		Vol -
	Muting		Mute
	Subwoofer		Dual
	Dd Prologic		Options
	Super SRND		Subt
	Simulated ST.		Media
	SFC		List
	Mix 2ch		Smart
	Test		Text
	CH Select		Ok
	CH+		Ch +
	CH-		Ch -





**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	AUX	+	Shift + 1
	AUX		Red
	TUNER / BAND	+	Shift + 2
	TUNER / BAND	+	Shift + TV/R
	TUNER / BAND		Green
	DVD / CD	+	Shift + 3
	DVD / CD		Blue
	TV		Yellow
	TV	+	Shift + 4
	TV		TV/R
	VCR	+	Shift + 5
	Volume+		Vol +
	Volume-		Vol -
	Muting		Mute
	1 / Disc 1		1
	2 / Disc 2		2

 

 
 

 
 



 



**Originalfernbedienung    Ersatzfernbedienung**

	3 / Disc 3		3
	4 / Disc 4		4
	5 / Disc 5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	≥10 / -/-		Guide
	Disc		Pre Ch
	Pause		Pause
	<< Slow/Search		<<
	Slow/Search >>		>>
	Play		Play
	I<< Skip		I<<
	Stop		Stop
	Skip >>I		>>I


 

 









**Originalfernbedienung Ersatzfernbedienung**










 

 

 

 











 


	Disc Manager		D. Menu
	Play Mode		Shift + Play
	Clear		Exit
	Repeat		Text
	A-B Repeat		Shift + Text
	Title		Smart
	Marker		Media
	Return		Back
	Display		Info
	Up / On		Up
	Down / Off		Down
	Left		Left
	Right		Right
	Select		Ok
	Menu		Menu
	Set Up		Options
	Sub Title		Subt

**Originalfernbedienung Ersatzfernbedienung**

	Audio		Dual
	Angle		Format
	FL Display		Shift + Info
	Timer		AV




**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	TV/AV		AV
	CH+		Ch +
	CH-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	≥10 / -/--		Guide




 







 



 







 










 

**Originalfernbedienung Ersatzfernbedienung**








Originalfernbedienung Ersatzfernbedienung Originalfernbedienung Ersatzfernbedienung

	Power		Power		Play		Play
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	≥10 / -/--		Guide				
	CH+		Ch +				
	CH-		Ch -				
	Stop		Stop				
	<<		<<				
	>>		>>				

