







 























 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Info		Info / Angle
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Source		AV / Input / RDS
	0		0
	Audio I/II		Audio / Lang I/II
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear

Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	CH +		CH+ / Page+
	Index		Display / Media
	Vol +		Vol+
	CH -		CH- / Page-
	List		Smart / List
	Vol -		Vol-
	Fav		Fav / Marker / PC
	Sleep		Sleep / Timer
	EPG		Guide / EPG / -/-
	Recall		Back / Return
	Red / <<		<< / Tune-
	Red / <<		Red / Netflix / Search





Originalfernbedienung Ersatzfernbedienung


 


Green / >>	>> / Tune+
Green / >>	Green / APP / Repeat
Yellow / I<<	I<< / Preset-
Yellow / I<<	Yellow / YouTube / Repeat
Blue / >>I	>>I / Preset+
Blue / >>I	Blue / Prime Video / Random
Text / Play/Pause	Text / Goto
Text / Play/Pause	Play / Slow
Text / Play/Pause	Pause / Step / Freeze
Stop / Still	Stop / Hold
Radio	TV/Radio /
Size / Aspect	Picture / Format
Size / Aspect	Zoom / Size
	Eject / Surround
Subtitle / [≡o]	Subtitle / EQ
DMP	D.Menu / Top
Rec	Rec / Rec Mode

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Info		Info / Angle
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Source		AV / Input / RDS
	0		0
	O)/I-II/Audio		Audio / Lang I/II
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear

Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	CH+		CH+ / Page+
	Index		Display / Media
	Vol+		Vol+
	CH-		CH- / Page-
	List		Smart / List
	Vol-		Vol-
	♥		Fav / Marker / PC
	Sleep		Sleep / Timer
	EPG		Guide / EPG / -/-
	Recall		Back / Return
	Red		Red / Netflix / Search
	<<		<< / Tune-





Originalfernbedienung Ersatzfernbedienung

	Green		Green / APP / Repeat
	>>		>> / Tune+
	Yellow		Yellow / YouTube / Repeat
	I<<		I<< / Preset-
	Blue		Blue / Prime Video / Random
	>>I		>>I / Preset+
	[≡]		Text / Goto
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	[≡+]		Shift + Stop /
	Stop/Still		Stop / Hold
	Radio		TV/Radio /
	[≡♦]/[++]		Zoom / Size
	[≡x]		Eject / Surround
	[≡o]/Subtitle		Subtitle / EQ
	DMP		D.Menu / Top
	Rec		Rec / Rec Mode

Originalfernbedienung Ersatzfernbedienung

