



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	FAV		Pre Ch
	TXT		Text
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

Originalfernbedienung Ersatzfernbedienung

	Guide		Guide
	?		Info
	Back		Back
	Exit		Exit
	Tools		Options
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +
	P-		Ch -
	I<		I<<
	>I		>>I





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	<<		<<				
	>>		>>				
	Rec		Rec				
	Play		Play				
	Pause		Pause				
	Stop		Stop				
	3D		3D				
	[...].		Subt				
	Menu		Menu				
	..OQ		Format				
	@		Smart				
	My Media		Media				
	Netflix		D. Menu				
	Source		AV				

