



 
 








 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	FAV		Pre Ch
	TXT		Text
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

Originalfernbedienung Ersatzfernbedienung

	Guide		Guide
	?		Dual
	Exit		Exit
	Menu		Menu
	Tools		Options
	Back		Back
	@		Smart
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Source		AV
	P+		Ch +





**Originalfernbedienung    Ersatzfernbedienung**

	P-		Ch -
	I<		I<<
	>I		>>I
	<<		<<
	>>		>>
	Rec		Rec
	Play		Play
	Pause		Pause
	Stop		Stop
	3D		3D
	OQ		Format
	[...].		Subt
	Netflix	+	Shift + Media
	My Media		Media

**Originalfernbedienung    Ersatzfernbedienung**