 







 







 

 

 




**Originalfernbedienung Ersatzfernbedienung**

	1		1
	2		2
	3		3
	Power		Power
	4		4
	5		5
	6		6
	Brightness+		>>I / Preset+
	7		7
	8		8
	9		9
	Brightness-		I<< / Preset-
	PC/AUX		AV / Input / RDS
	0/AV		0
	TXT		Text / Goto
	Color+		>> / Tune+
	P+		CH+ / Page+

**Originalfernbedienung Ersatzfernbedienung**

	Up		Up
	Color-		<< / Tune-
	Left		Left
	Vol-		Vol-
	OK		OK
	Right		Right
	Vol+		Vol+
	i		Info / Angle
	Down		Down
	P-		CH- / Page-
	Mute		Mute / Dimmer

