

 


 

 

 



 




 



 
 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep
	Mute		Mute
	Mode		Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--	 + 	Shift + Guide
	Back		Back
	Nicam/A2		Dual

Originalfernbedienung Ersatzfernbedienung

	TXT/MIX		Text
	Play		Play
	Pause		Pause
	Stop		Stop
	Rec		Rec
	>>/Index		>>
	<</Hold		<<
	I<<		I<<
	>>I		>>I
	Cancel		Exit
	Menu		Menu
	DTV/Radio		TV/R
	Vol+		Vol +
	Vol-		Vol -
	Up		Up
	Down		Down
	Right		Right




 

 

 

 



 


 











 



 
 







**Originalfernbedienung Ersatzfernbedienung**

Power		Power
Mute		Mute
[ I ]/Menu		Menu
Exit		Exit
Source		AV
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
0		0
Subtitle		Subt
Text		Text

**Originalfernbedienung Ersatzfernbedienung**

Vol+		Vol +
Vol-		Vol -
CH+		Ch +
CH-		Ch -
Up		Up
Down		Down
Right		Right
Left		Left
OK		Ok
Recall		Back
Info		Info
EPG		Guide
Freeze		Options
Red		Red
Green		Green
Yellow		Yellow
Blue		Blue



