



Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------|---|-------------------|
|  | Mute |  | Mute / Dimmer |
|  | Power |  | Power |
|  | PP |  | Back / Return |
|  | I / II |  | Audio / Lang / II |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | -- |  | Fav / Marker / PC |
|  | P<P |  | Display / Media |
|  | Menu |  | Menu / Home |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------------|---|-----------------------------|
|  | Info |  | Info / Angle |
|  | Left |  | Left |
|  | P + |  | Shift + CH+ / |
|  | P + |  | CH+ / Page+ |
|  | Right |  | Right |
|  | P - |  | Shift + CH- / |
|  | P - |  | CH- / Page- |
|  | Vol - |  | Vol- |
|  | Vol + |  | Vol+ |
|  | Red / Sound |  | Red / Netflix / Search |
|  | Green / Picture |  | Green / APP / Repeat |
|  | Yellow / Feature |  | Yellow / YouTube / Repeat |
|  | Blue / Install |  | Blue / Prime Video / Random |
|  | TV |  | TV/Radio / |
|  | AV |  | AV / Input / RDS |
|  | Text |  | Text / Goto |
|  | Mix |  | Shift + Text / Goto |



| Originalfernbedienung | Ersatzfernbedienung | Originalfernbedienung | Ersatzfernbedienung |
|---|---------------------|---|-----------------------|
|  | Timer |  | Sleep / Timer |
|  | Size |  | Zoom / Size |
|  | Cancel |  | Exit / Cancel / Clear |
|  | Hold |  | Stop / Hold |
|  | Help |  | Shift + Info / Angle |
|  | Index |  | OK |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

