


 
 


 

 

 

 


 



 

 

 


 

 

 

 

 

 


 

 

 
 

 






Originalfernbedienung	Ersatzfernbedienung
	 Power
	 AV / Input / RDS
	 Set up / OPT /
	 Sound / Title
	 Shift + Menu /
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 D. Menu / Top
	 0
	 Sleep / Timer

Originalfernbedienung	Ersatzfernbedienung
	 Vol -
	 Vol +
	 Mute / Dimmer
	 CH+ / Page+
	 Audio / Lang I/II
	 CH- / Page-
	 Subtitle / EQ
	 Display / Media
	 Info / Angle
	 Fav / Marker / PC
	 Picture / Format
	 Smart / List
	 Menu / Home
	 Up
	 Guide / EPG / - / - / -
	 Left
	 OK



