
 








 








Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------|---|-------|
|  | Power |  | Power |
|  | Mute |  | Mute |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | Menu |  | Menu |
|  | Exit |  | Exit |
|  | Up / CH+ |  | Up |
|  | Up / CH+ |  | Ch + |
|  | Down / CH- |  | Down |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|----------------|
|  | Down / CH- |  | Ch - |
|  | Right / Vol+ |  | Right |
|  | Right / Vol+ |  | Vol + |
|  | Left / Vol- |  | Left |
|  | Left / Vol- |  | Vol - |
|  | OK / Store |  | Ok |
|  | P- |  | Shift + Ch - |
|  | P+ |  | Shift + Ch + |
|  | EPG |  | Guide |
|  | Back |  | Back |
|  | i |  | Info |
|  | Subtitle |  | Subt |
|  | Text |  | Text |
|  | Aspect |  | Format |
|  | Picture |  | Shift + Format |
|  | Audio |  | Dual |
|  | Sleep |  | Sleep |



