 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	<<[]>>		<<
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Find		Shift + TV/R
	Recall		Pre Ch
	TV/DBS		Smart
	TV/Radio		TV/R










 















 

 

 

 
 
 
Originalfernbedienung Ersatzfernbedienung

	FAV		Shift + Pre Ch
	VCR/DBS		Media
	Page+		>>
	Page+		Shift + Ch +
	Page-		<<
	Page-		Shift + Ch -
	Edit		Options
	Guide		Guide
	SAT		AV
	Info		Info
	Red / Pause		Red
	Red / Pause		Pause
	Green / Zoom		Green
	Green / Zoom		3D
	Yellow / T/Text		Yellow
	Yellow / T/Text		Text
	Blue / Timer		Blue





Originalfernbedienung Ersatzfernbedienung

	Blue / Timer		Shift + AV
	Up / CH+		Up
	Up / CH+		Ch +
	Down / CH-		Down
	Down / CH-		Ch -
	Right / Vol+		Right
	Right / Vol+		Vol +
	Left / Vol-		Left
	Left / Vol-		Vol -
	OK / List		Ok
	OK / List		List
	Menu / Back		Menu
	Menu / Back		Back
	Exit		Exit
	Subtitle		Subt
	Audio		Dual
	Signal		D. Menu

Originalfernbedienung Ersatzfernbedienung

	PIP		Format
	Multifeed		Sleep
	[[+]]		Play
	<<[]>>		>>
	F1		Shift + 1
	F2		Shift + 2
	F3		Shift + 3

