

 





 




Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|-------------------|
|  | Power |  | Power |
|  | Mute |  | Mute / Dimmer |
|  | Audio |  | Audio / Lang I/II |
|  | TV / STB |  | AV / Input / RDS |
|  | TV / R |  | TV/Radio / |
|  | Sleep |  | Sleep / Timer |
|  | SUB |  | Subtitle / EQ |
|  | TXT |  | Text / Goto |
|  | Multi |  | Display / Media |
|  | P / N |  | Picture / Format |
|  | Recall |  | Back / Return |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------|---|-------------------|
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | SAT |  | Shift + 0 |
|  | EPG |  | Guide / EPG / -/- |
|  | Fav |  | Fav / Marker / PC |
|  | PGUP |  | CH+ / Page+ |
|  | PGDN |  | CH- / Page- |
|  | Up |  | Up |
|  | Right |  | Right |
|  | FAV + |  | Vol+ |
|  | FAV - |  | Vol- |
|  | Down |  | Down |
|  | Left |  | Left |
|  | OK |  | OK |
|  | Menu |  | Menu / Home |




 
 




Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------|---|-----------------------------|
|  | Exit |  | Exit / Cancel / Clear |
|  | Red |  | Red / Netflix / Search |
|  | Green |  | Green / APP / Repeat |
|  | Yellow |  | Yellow / YouTube / Repeat |
|  | Blue |  | Blue / Prime Video / Random |
|  | Pause |  | Pause / Step / Freeze |
|  | Zoom |  | Zoom / Size |
|  | Edit |  | D.Menu / Top |
|  | Info |  | Info / Angle |
|  | USB |  | Shift + 8 |
|  | A - B |  | Shift + Yellow / YouTube / |
|  | Goto |  | Shift + Text / |
|  | OGG |  | Shift + 1 |
|  | JPEG |  | Shift + 2 |
|  | PIP |  | Eject / Surround |
|  | Stop |  | Stop / Hold |
|  | Rec |  | Rec / Rec Mode |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|---------------|
|  | T.S. |  | Sound / Title |
|  | << |  | << / Tune- |
|  | >> |  | >> / Tune+ |
|  | PVR List |  | Smart / List |
|  | Play / Pause |  | Play / Slow |
|  | I<< |  | I<< / Preset- |
|  | >I< |  | Setup / OPT / |
|  | >>I |  | >>I / Preset+ |

