


Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	P/N		Smart / List
	Mute		Mute / Dimmer
	Eject		Eject / Surround
	Prog		TV/Radio /
	1		1
	2		2
	3		3
	Search		Red / Netflix / Search
	4		4
	5		5
	6		6
	Subtitle		Subtitle / EQ
	7		7
	8		8
	9		9
	Angle		Info / Angle

Originalfernbedienung Ersatzfernbedienung

	0		0
	10+		Guide / EPG / -/-
	PBC		D.Menu / Top
	Setup		Setup / OPT /
	Up		Up
	Return		Back / Return
	Left		Left
	Enter		OK
	Right		Right
	Title		Sound / Title
	Down		Down
	Menu		Menu / Home
	Channel		Text / Goto
	Language		Audio / Lang I/II
	Zoom		Zoom / Size
	Repeat		Green / APP / Repeat
	Mark		Fav / Marker / PC



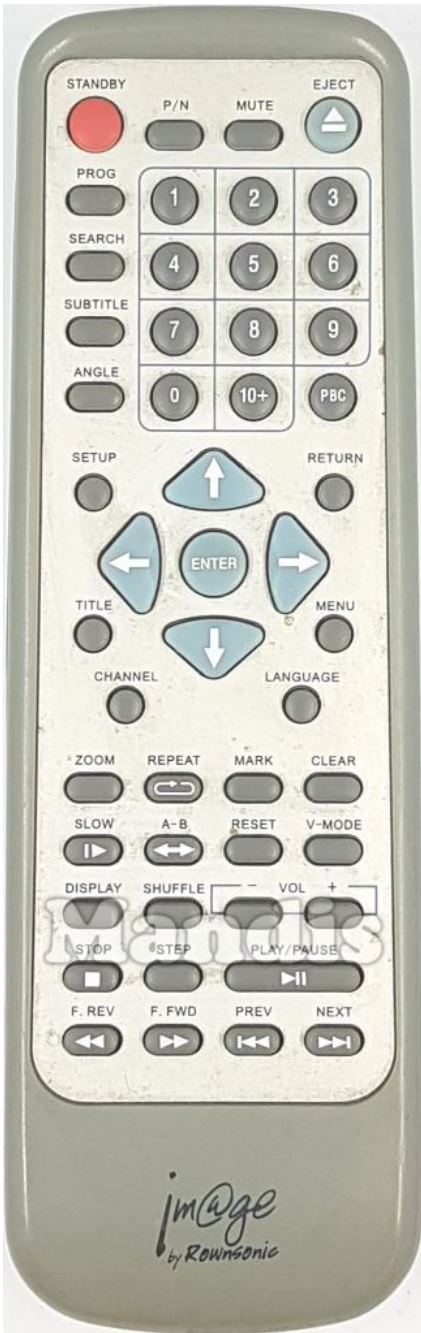

Originalfernbedienung

Ersatzfernbedienung

	Clear		Exit / Cancel / Clear
	I> Slow	+	Shift + Play /
	↔/A-B		Yellow / YouTube / Repeat
	Reset		AV / Input / RDS
	V-Mode		Picture / Format
	Display		Display / Media
	Shuffle		Blue / Prime Video / Random
	Vol-		Vol-
	Vol+		Vol+
	Stop		Stop / Hold
	Step	+	Shift + Pause / Step /
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	<</F.Rev		<< / Tune-
	>>/F.FWD		>> / Tune+
	I<</Prev		I<< / Preset-
	>>I/Next		>>I / Preset+

Originalfernbedienung

Ersatzfernbedienung

