 



 
 



 
 

 

 

 





 
 
 

 

 





 
 




 
 
 
 

 
 
 

 
 
 
 
 


 







**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TV / Radio		TV/R
	Last		Back
	Red / Audio		Red
	Red / Audio		Dual
	Green / Sub		Green

**Originalfernbedienung    Ersatzfernbedienung**

	Green / Sub		Subt
	Yellow		Yellow
	Blue		Blue
	Vol-		Vol -
	Vol+		Vol +
	Info		Info
	Exit		Exit
	EPG		Guide
	Smart		Smart
	File		Media
	Menu		Menu
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	TTX		Text




**Originalfernbedienung    Ersatzfernbedienung**

	OPT		Options
	<<		<<
	>>		>>
	Play		Play
	Stop		Stop
	Rec		Rec
	Pause		Pause
	F1		Shift + 1
	F2		Shift + 2

**Originalfernbedienung    Ersatzfernbedienung**