 


 
 
 
 
 
 
 
 
 




 
 
 
 

 



 
 


 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Picture		Format
	Sound		Shift + Dual
	Zoom		Eject
	Subtitle		Subt
	EPG		Guide
	FAV		Pre Ch
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9

Originalfernbedienung Ersatzfernbedienung

	0		0
	YouTube		Media
	Return / Back		Back
	Menu		Menu
	Source		AV
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Browser		Shift + Media
	Enter		Ok
	Exit		Exit
	Vol +		Vol +
	Home		Smart
	Vol -		Vol -
	CH +		Ch +
	CH -		Ch -



